


MediaCASTool User Guide


To set MultiCAS, CCCAM, NewCamd, Home Sharing via USB

1. MultiCAS setting via USB

- 1) Open **“MediaCASTool.exe”** program on your PC
- 2) Put USB stick into your PC and Select USB -> O.K

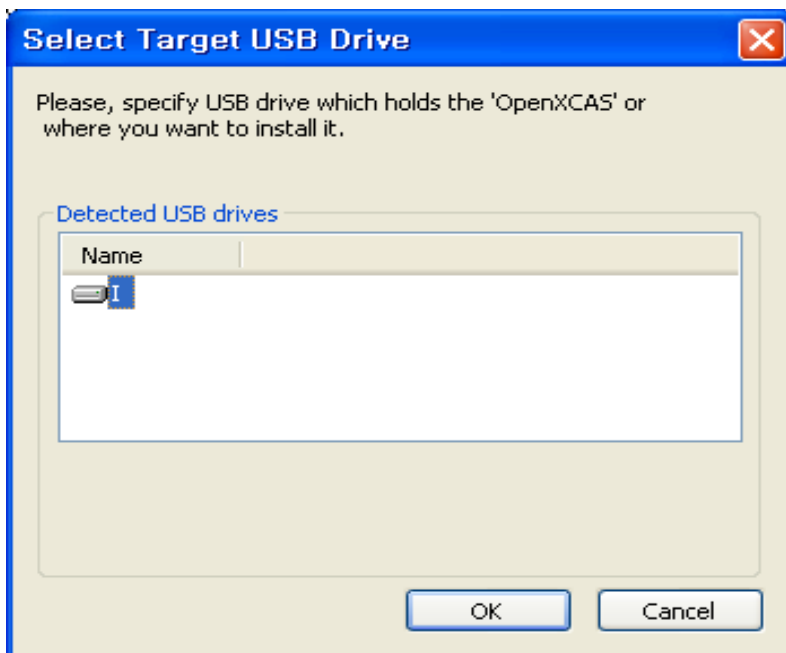


- 3) File -> choose **“Install Module To Drive”**

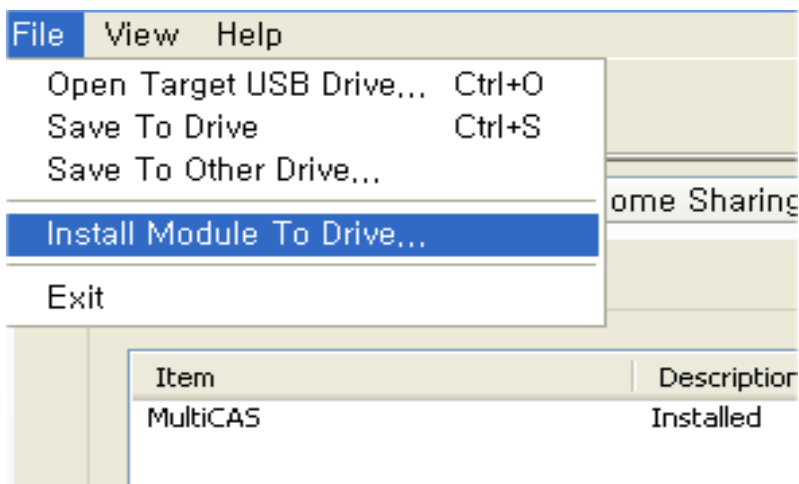


4) Choose Multicas software with **zip** file

- donot open ZIP file

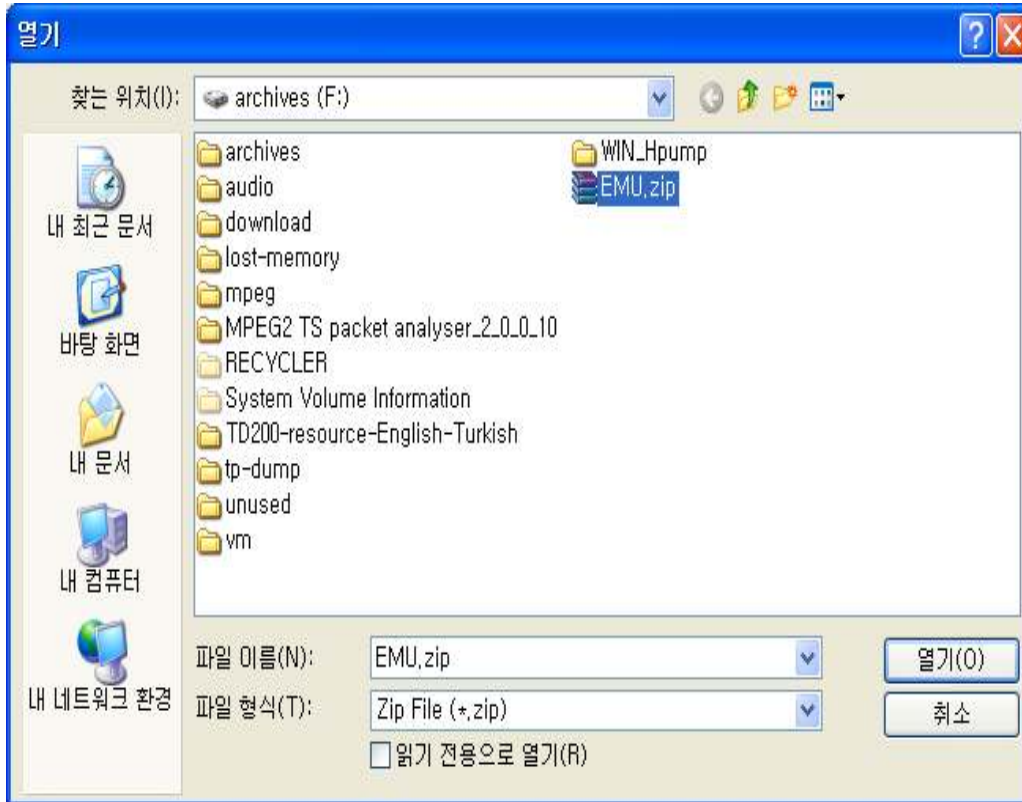


5) Choose **“Install to USB driver”**

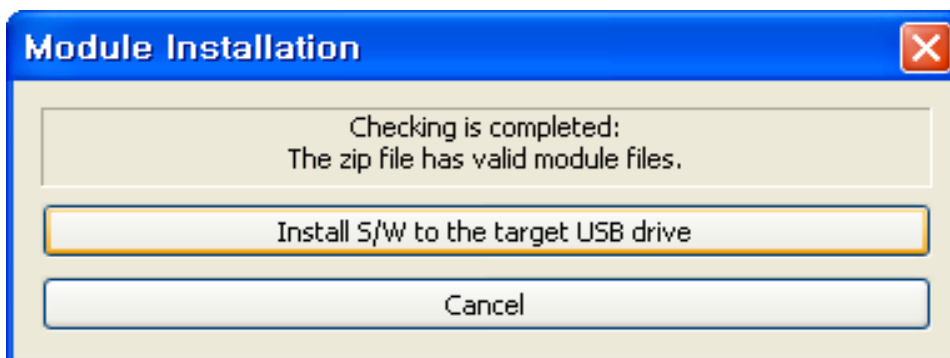


- 6) To check your proper install to USB, you have to go Information on Program. Then shows you **“MultiCAS Installed”**
- 7) Insert USB to Receiver
- 8) Receiver Rebooting (Power OFF/ON) -> Automatically downloaded
- 9) MultiCAS setting finished

2. CCCAM, NEWCAMD Setting via USB


- 1) open **"MediaCASTTool.exe"** on your PC
- 2) Choose USB mode to install data
- 3) Go to **"Card Splitter & Home Sharing"**

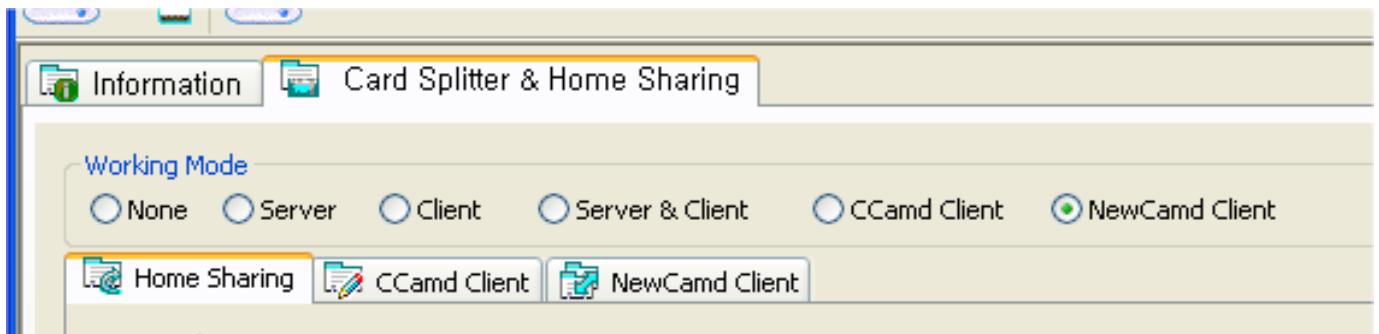

- 4) Choose CCCAM or Newcamd or others
- 5) Setting server

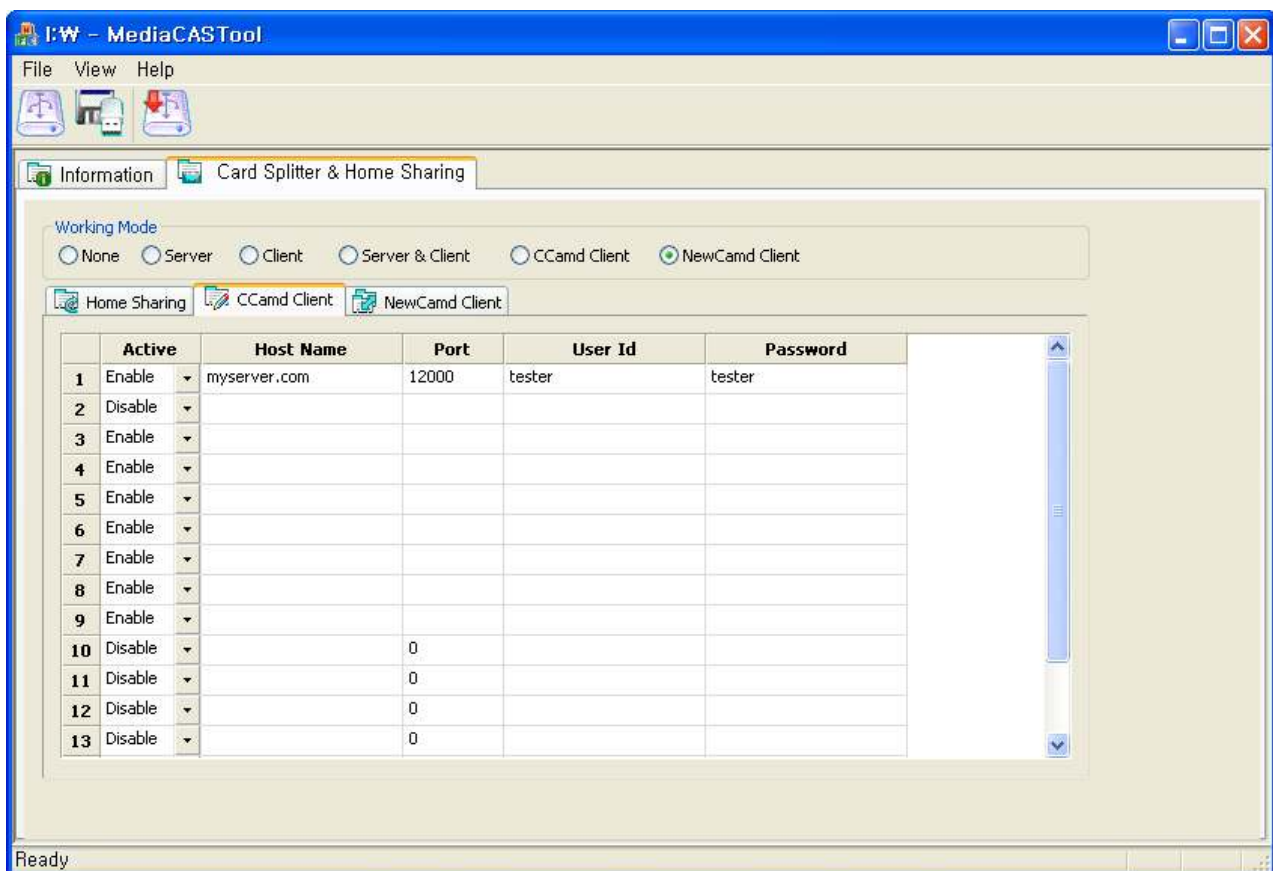

6) Choose **“Save Configuration”** to save automatically

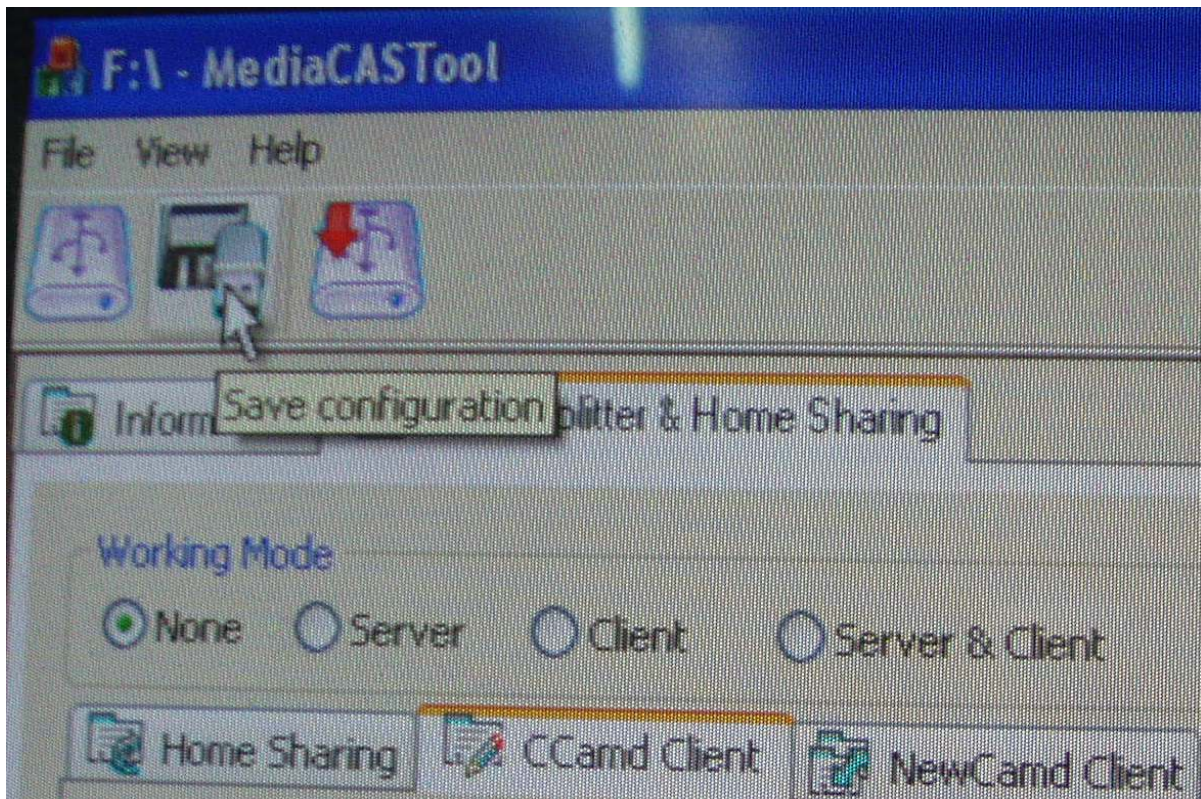

7) Insert USB to Receiver

8) Receiver Rebooting (Power OFF/ON) -> Automatically downloaded

*** Notice ***

1. You have to keep USB into Receiver.

when you take out USB memory stick from receiver, Multicas and CCCAM+Newcamd are not working more. It is working with USB only in new technology.

2. This receiver has TWO inputs (Tuner 1 + Tuner 2 for Two tuner)