

Special Function (Hidden Key Function)

- Master Password : 9200
- Key Code Edit : Menu + 1117
- Set-to-Set Download for Master Set with RCU
 1. For Firmware only
In Standby, Back + 1118 + Red Button
 2. For DB only (Including Key Code)
In Standby, Back + 1118 + Blue Button
 3. For Firmware + DB (Including Key Code)
In Standby, Back + 1118 + Yellow Button
- Set-to-Set Download for Master Set without RCU
 1. For Firmware only
AC Power Cord Connect while Pressing Menu Button and OK Button of the Front Panel simultaneously
 2. For DB only (Including Key Code)
AC Power Cord Connect while Pressing Left Button and Up Button of the Front Panel simultaneously
 3. For Firmware + DB (Including Key Code)
AC Power Cord Connect while Pressing Right Button and Power Button of the Front Panel simultaneously
- ◆ For Slave set
After setting Master Set and connecting serial download cable with Master set, Connect the power cord of Slave Set. Download will be started automatically.
- After finishing downloading one set, you need to change only the slave sets.
(Repeat only the slave process for multiple downloading).
Master set will remain same master mode unless you disconnect the power cord of master set.